

**U-BOAT**  
ITALO FONTANA

# EN

**DEAR CUSTOMER,  
WE CONGRATULATE YOU ON THE PURCHASE OF THIS U-BOAT WATCH.  
IN THIS BOOKLET YOU WILL FIND THE INSTRUCTIONS FOR USE, THE  
TECHNICAL DETAILS AND THE WARRANTY BOOKLET.  
WE KINDLY INVITE YOU TO REGISTER YOUR WATCH  
ON OUR OFFICIAL WEB SITE  
IN THE U-CLUB AREA, DEDICATED EXCLUSIVELY TO THE U-BOAT WATCHES  
OWNERS AND GAIN ACCESS TO FURTHER BENEFITS AND PREVIEWS ON  
OUR LATEST NEWS, EVENTS AND OFFERS.**

# EN

## WATCH OPERATION INSTRUCTIONS.

**A** START AND STOP CHRONOGRAPH

**B** RESET CHRONOGRAPH

**C** SCREW CROWN

**D** HOUR HAND

 
**E** MINUTE HAND

**F** CHRONOGRAPH SECOND HAND


**G** SECOND HAND

**H** CHRONOGRAPH MINUTE HAND

**I** CHRONOGRAPH HOUR HAND

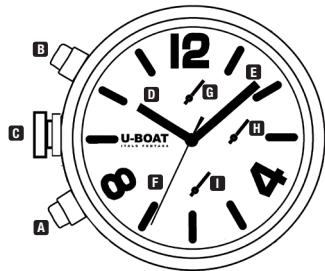


REPRESENTATIVE IMAGE.

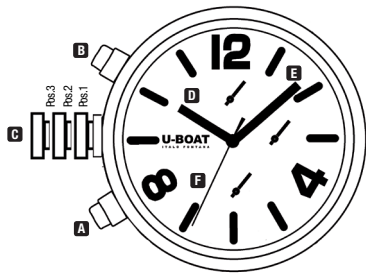 

## SETTING THE PRECISE TIME.


1. Unscrew the crown **C** and bring it into the position 3.
2. Turn crown **C** to set the desired time.
3. Screw down the crown **C** to put it back into position 1.

 NB: we advise pulling out crown **C** into position 2 when the watch isn't being used for a long period to limit battery consumption.

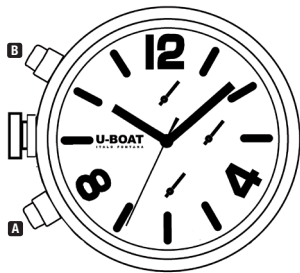


## CHRONOGRAPH OPERATION INSTRUCTIONS.

 1. Press button **A** to start the chronograph.
2. Press button **A** again to stop the chronograph.
3. Press button **B** to reset the chronograph.

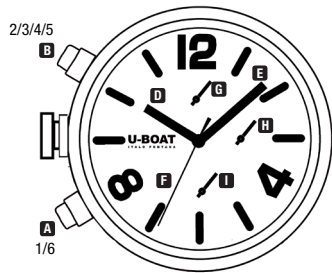


## INTERMEDIATE TIME FUNCTIONS.

 1. Press button **A** to start the chronograph.
2. Press button **B** to stop the chronograph and read the intermediate time while timing continues. Pressing button **B** again returns the chronograph hands to the current time recorded.
3. 1\* Start  
2\* Time reading  
3\* Restart  
4\* Time reading  
5\* Restart  
6\* Stop

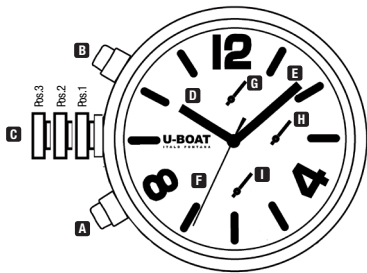

## ADJUSTING CHRONOGRAPH HANDS TO CORRECT POSITION.

 1. Unscrew the crown **C** and bring it into the position 3.
2. Press buttons **A** and **B** together for about 2 seconds.  
Hand **F** will rotate through 360°. (IF FITTED)  
Pressing button **A** returns hand **F** to the correct position. (IF FITTED)  
Press button **B** to activate correction of hand **I**.  
Press button **A** to return hand **I** to the correct position.  
Pressing button **B** again activates correction of hand **H**.  
Press button **A** to return hand **H** to the correct position.
3. Screw down the crown **C** to put it back into position 1.

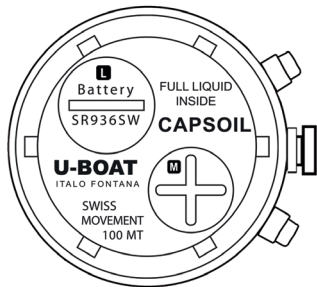

## BATTERY REPLACEMENT AND OIL ADJUSTMENT

1. Innovative closure system with a compartment for quick battery change. **L**
2. Closing system for oil regulation in the case, exclusively by U-BOAT specialized technicians. **M**



# EN

## **CARE AND MAINTENANCE.**

The precision mechanism in your watch will provide long-lasting performance when properly cared for.

We recommend taking your watch to an Authorised Retailer / Authorised Service Centre every year for a check-up, perform ordinary maintenance on all mechanical parts and restore of water-resistance.

We also advise taking your watch to an Authorised Retailer / Authorised Service Centre to change the strap.

Avoid leaving your watch where it is exposed to large temperature variations, humidity, the sun and strong magnetic fields.

Make sure the watch is in adequate conditions for water use/activities.

Remember to rinse the watch after it comes into contact with seawater.

Automatic watches require manual winding following a long period of inactivity.